
BOSSY ALUMINIUM T&T SYSTEM

Bossy Titan A Series Tilt And Turn System Hardware Installation Instructions

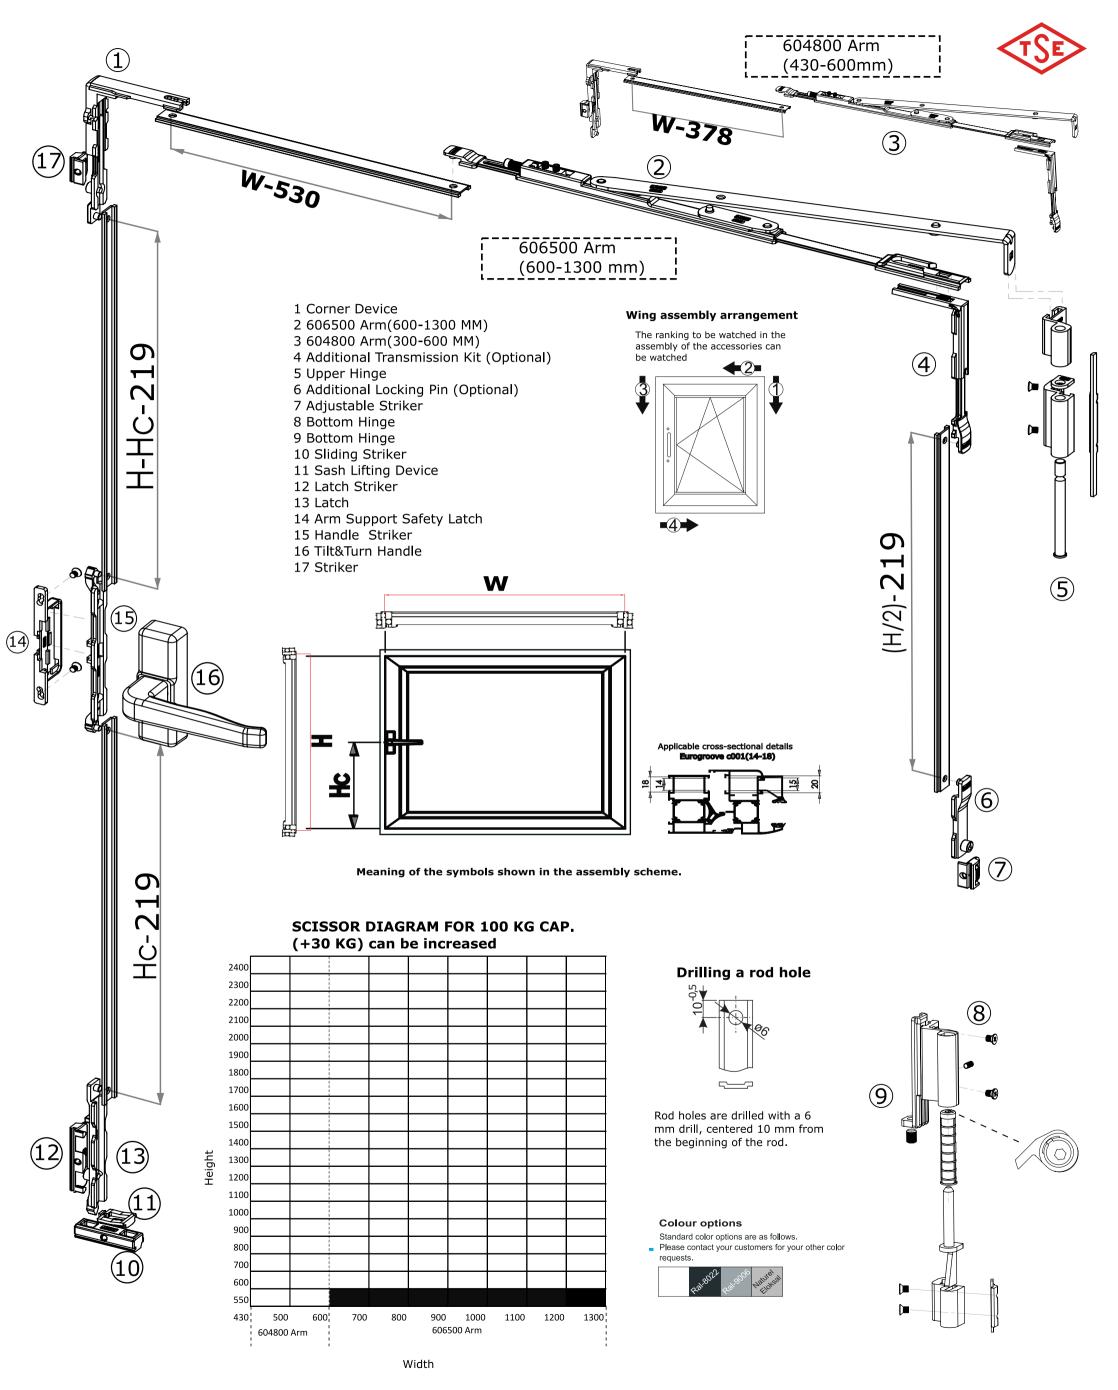



 
BOSSY ALUMINIUM T&T SYSTEM



Bossy Titan A Series Tilt And Turn System Hardware Installation Instructions


Case Accessory Assembly diagram

Dimensions of the parts to be mounted on the case **Case cut dimensions**




Measuring the Handle The dimensions of the double opening window handle on the sash are as follows


Assembling the Frame Hinge Groups

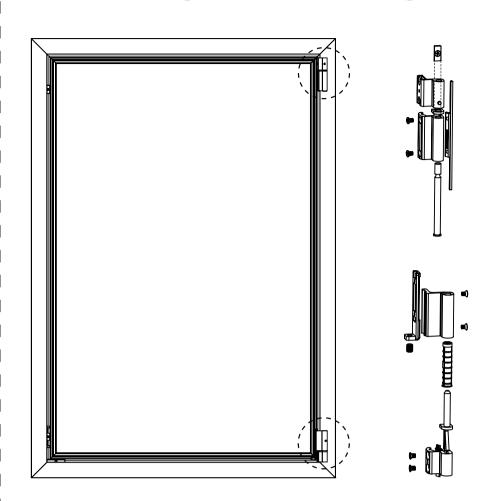


Scissor Assembly Stages

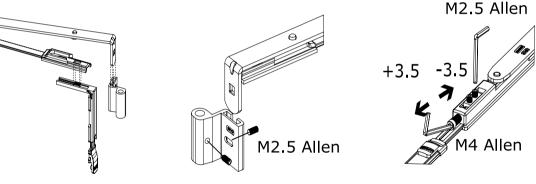

Handle Assembly Diagram

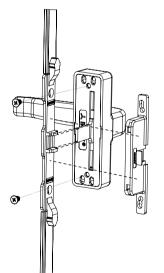

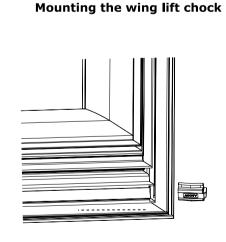

the lower hinge position of the lower hinge M2.5 alyan M4 Allen The hinge position must be set

WARRANTY CERTIFICATE

Adjusting the vertical position of



in the window open.

Adjusting the horizontal

SCOPE OF WARRANTY AND REQUIRED REGULATIONS

WARRANTY CERTIFICATE

Manufacturer : Birikim Kalıp Yapı Ürünleri ve Mak.San.Tic.Ttd.Şti.

Address: Y.Dudullu, Organize san. Böl, 2. Cd. NO:28/1, 34775 Dudullu Osb/Ümraniye/İstanbul

Tel: +90 216 365 42 50-51 Fax: +90 216 314 95 44 E-Mail: info@birikimkalip.com Web: www.bossy.com.tr **Warranty conditions**

 
1. The Warranty Period starts from the delivery date of the goods and is 5 years. 2. Our company, including all parts of the product: BİRİKİM KALIP YAPI URUNLERI VE MAK SAN.TİC.LTD.ŞTİ. covered by the warranty.

- 3, In case the goods fail within the warranty period, the time spent in repair is added to the
- 4. Defects resulting from the use of the product contrary to the terms in the user manual are not covered by the warranty.

Equipment Used

PH 2 SCREWDRIVER

M2.5 , **M4** Allen





Dimension is mm.